

XTreme

Rotax 912iS Setup

English 1.00

RPM:

PULSES/REV: 1.0

Fuel Flow:

K-FACTOR 1: 3500

MODE: FLOW SENDER

Manifold Air Pressure:

No change needed

Oil Pressure:

TYPE: 0-5V

SENDER: User

CALIBRATE SENDER:

POINTS: 2

DISPLAY 1: 0.0 bar

ADC 1: 0000

DISPLAY 2: 10.0 bar

ADC 2: 4095

Oil Temperature:

SENDER: LM335

LM335: 0

Coolant Temperature:

This is remapped to ANALOG AUX1/3

FUNCTION: TEMPERATURE

SENDER: LM335

LM335: 0

LABEL: COOLANT

EGT 1,2,3,4

EGT CHANNELS: 4

Throttle Position:

0-100% can be viewed in the ROTAX 912iS section

Engine Ambient Pressure:

This can be viewed in the ROTAX 912iS section

Fuel Level senders:

This is setup as normal in the fuel setup menu

Fuel pressure sender:

This is setup as normal in the fuel setup menu

DC current input:

This is setup as normal in the current setup menu